




PN10834 and PN10835 Shore Ramp Kit Installation Instructions

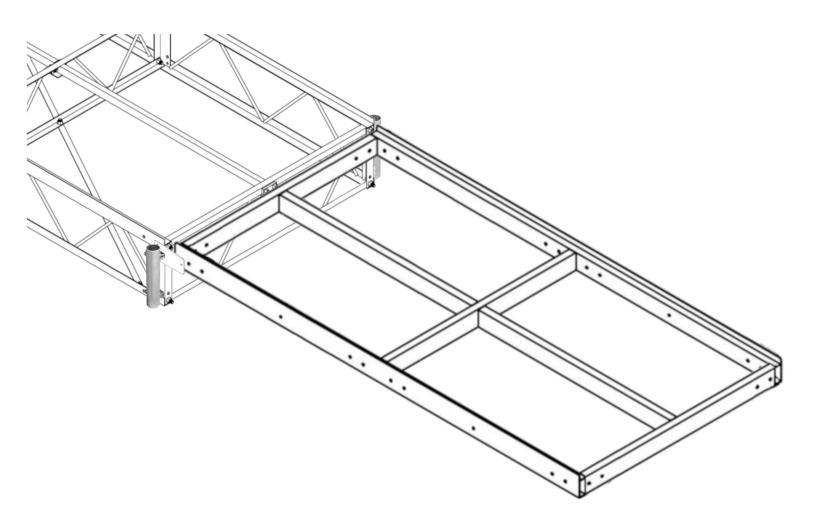

<u>Tools Required</u>: M14 (9/16"), M15 (5/8"), M17 (11/16") and M19 (3/4") Wrenches, Work Gloves and Safety Glasses.

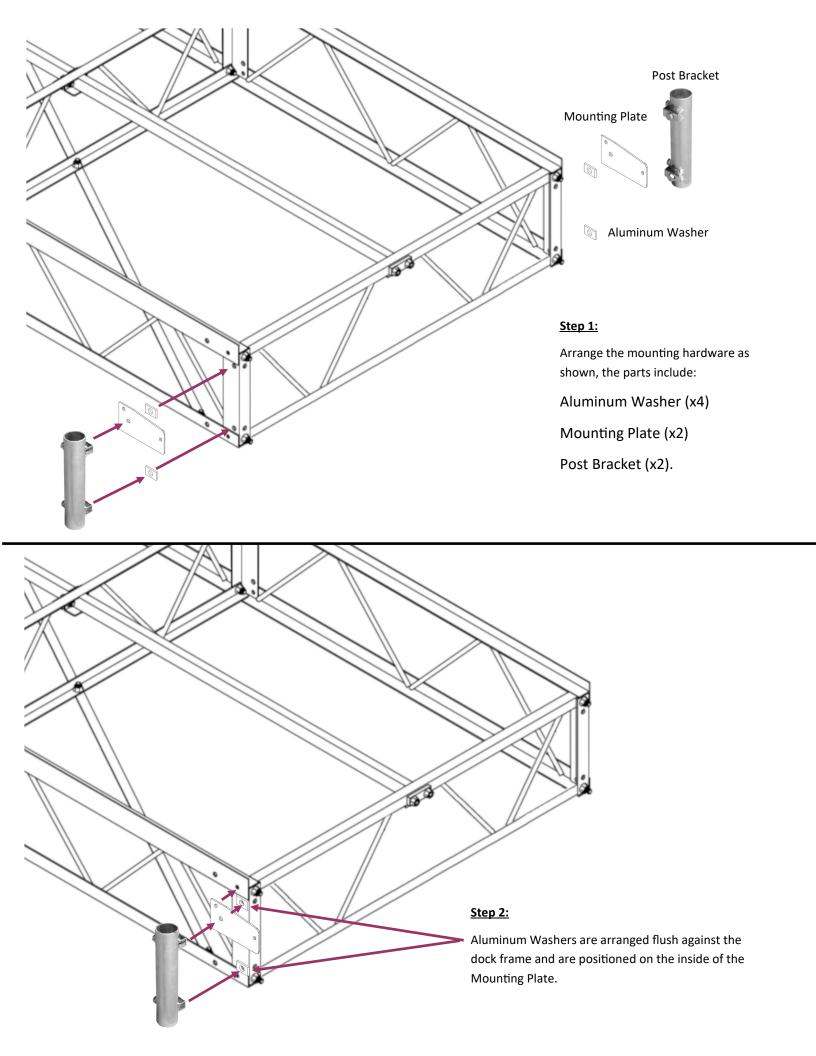

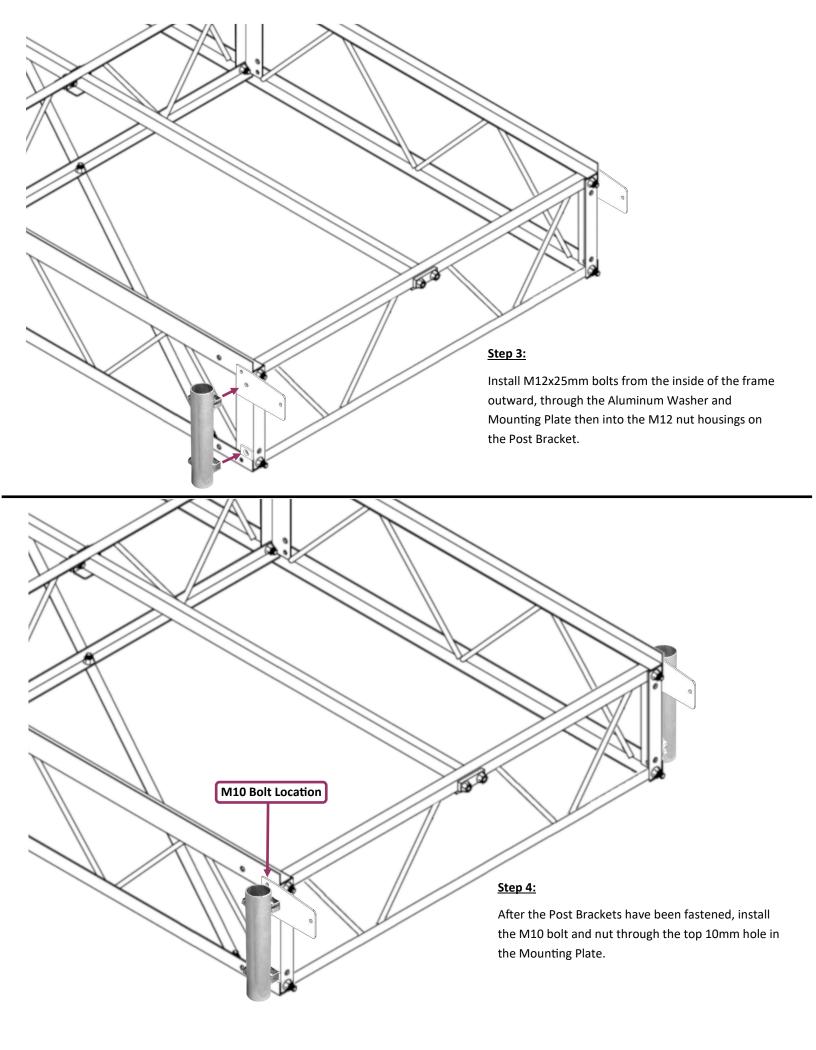

## Step 5:

Position shore ramp frame between the Mounting Plates. Secure the Shore Ramp frame to the Mounting Plates using M10x70mm bolts and nylock nuts. <u>DO NOT over-tighten</u> <u>connection, the ramp should pivot freely.</u>

## <u>Step 6:</u>

Lastly, place decking into the Shore Ramp frame, secure in place as necessary. If aluminum decking, install deck cushion on ramp frame before installing decking.