


CDI P/N: 155-1450

NOTE: This universal rectifier can be used to replace Chrysler/Force P/N: F369450, F369450-1, FK369450 and other applications as needed. This product is designed for installation by a professional marine mechanic. CDI cannot be held liable for injury or damage resulting from improper installation, abuse, neglect or misuse of this product.

DO NOT USE A MAINTAINENCE FREE OR AGM BATTERY WITH ANY RECTIFIER AS DAMAGE TO ELECTRICAL PARTS MAY OCCUR!!! A RECTIFIER BY ITSELF DOES NOT REGULATE THE BATTERY VOLTAGE.

INSTALLATION


1. Disconnect the battery negative cable.
2. Disconnect the old rectifier (note the color of the stator wires).
3. Remove the old rectifier, saving the original mounting screw.
4. Mount the new rectifier, using the original screw.
5. Connect the black engine ground wire to the ENG GND terminal.
6. Connect the red jumper wire from the starter solenoid to the + BAT terminal.
7. Connect the wires from the stator to the AC terminals.

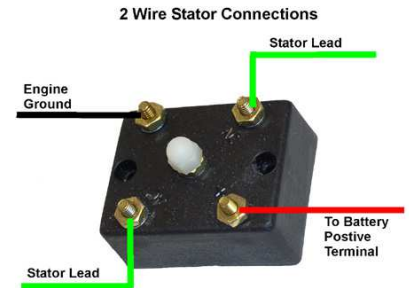

TROUBLESHOOTING

Using a digital Volt/Ohm meter, Check the resistance of the rectifier as follows:

| Red Meter Lead | Black Meter Lead | Reading |
|----------------|------------------|------------------|
| ENG GND | AC 1 | over 1 Mega Ohms |
| ENG GND | AC 2 | over 1 Mega Ohms |
| ENG GND | AC 3 | over 1 Mega Ohms |
| AC 1 | + BAT | over 1 Mega Ohms |
| AC 2 | + BAT | over 1 Mega Ohms |
| AC 3 | + BAT | over 1 Mega Ohms |
| AC 1 | ENG GND | Open |
| AC 2 | ENG GND | Open |
| AC 3 | ENG GND | Open |
| + BAT | AC 1 | Open |
| + BAT | AC 2 | Open |
| + BAT | AC 3 | Open |

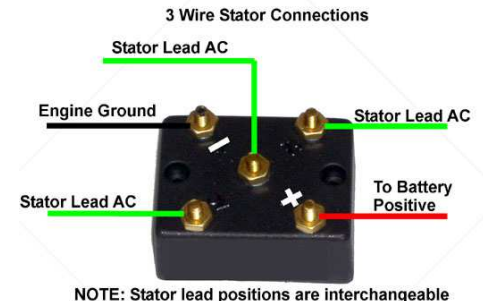

NOTE: Stator lead positions are interchangeable

* Diode readings are to be read one way, then reverse the leads and read again. You should get a low reading in one direction and a higher reading in the other. In Addition, the AC terminals are not marked as listed. They may be referred to in any order as long as the order is sequential.

MAXIMUN OUTPUT TEST

1. Install an ammeter capable of reading at least 15 amperes in-line on the red wire from the rectifier to the starter solenoid.
2. Connect a load bank to the battery.
3. In the water or on a Dynometer, start the engine and bring the RPM up to approximately 4500 in gear.
4. Turn on the load bank switches to increase the battery load to equal stator capacity and check the ammeter.
5. If the amperage is low,
 - A) Check the load bank connections and meter for battery draw.
 - B) If the output is still low, check and clean all connections between the battery and the rectifier. Inspect stator windings for burned or discolored windings.
6. If the amperage is correct, but the battery voltage remains low, replace the battery.

OVERCHARGING

1. Using a voltmeter, check the voltage on the battery and compare it to the voltage on the red wire connected to the starter solenoid to engine ground.
2. If the voltage is high on the engine compared to the voltage on the battery, do a voltage drop test and try to isolate the area where the problem is.
3. If the voltage is the same on the battery and the engine, but is over 15.5 volts at 4500 RPM, replace the battery with a known good high quality MARINE battery.
4. A continued high voltage reading may indicate the need for a regulator/rectifier combination instead of an rectifier only.